



No. 9030



A DAMON COMPANY
1295 H Street P.O. Box 280
Penrose, CO 81240


READ INSTRUCTIONS BEFORE PROCEEDING

STEP 1




Open top and bottom of both boxes and then carefully slide foam pieces out top as shown.

STEP 2

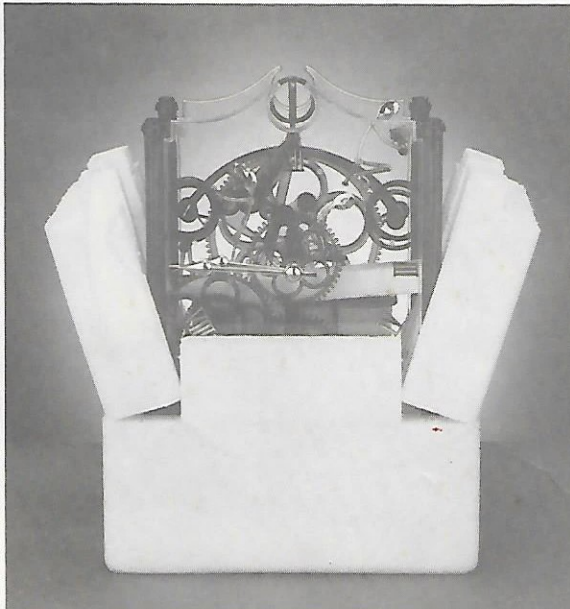


Carefully remove top foam and cut tape holding side pieces front and back. Remove side pieces of foam as seen in photo using care not to exert pressure inward.

STEP 3

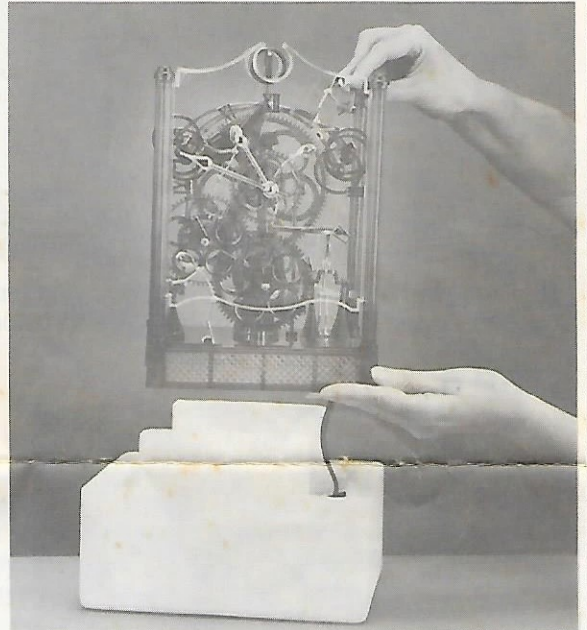

Remove clock from foam base.

STEP 4

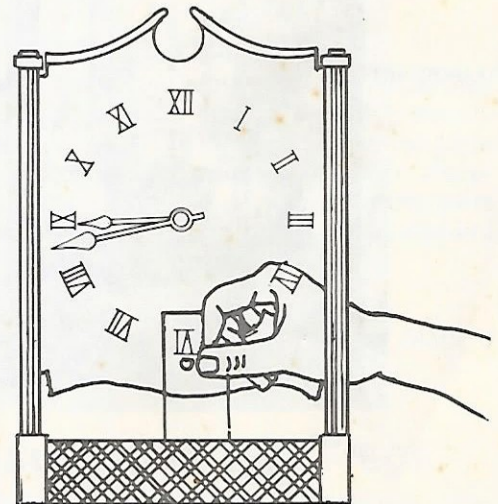

Remove interior foam pieces.

A. Remove front center foam piece by carefully sliding foam piece out right side of the clock.